



Manual – O2 Optimizer Installation

1. Turn off the motorcycle and remove the key from the ignition.
2. Remove the left side panel.

See Figure 1.

3. Locate the O2 sensor on the front header pipe and follow its wire.

See Figure 2.

4. The connector for this O2 sensor is located on the left side of the motorcycle.
5. Disconnect the original plug and install the O2 optimizer in between the connectors.

See Figure 3.

6. For 2026 models, two optimizers are supplied.

The second O2 sensor is located in the muffler. Its connector can be found under the seat, on the left side of the ECU.

7. Install the second optimizer in the same way. (Figure 4)

Important:

Do not bend the optimizer, as the internal components may be damaged.

8. Reassemble all removed parts.

9. The installation is now complete and the motorcycle is ready to use.



Figure 1



figure 2



figure 3



Figure 4